

DOMINION OFFROAD

Jeep JK 2007-11

COMPRESSOR MOUNT KIT

Phone: 626-Trails1 or 626-872-4571

INSTALLATION INSTRUCTIONS

Installation time 20 minutes to 1 hour.

Kit contents: (1) Compressor Bracket (1) Bulkhead Fitting Mount Pack

Required Tools:


- 13mm Wrench (preferably a ratcheting wrench)
- Philips Head Screw Driver
- Thread Locker
- 10mm Wrench
- Metric Allen Wrench Set
- 8mm or Crescent Wrench

1. Assemble the Bulkhead Fitting Mount Bracket, Bulkhead Fitting and Plug, as indicated by the following picture.
2. Using fasteners supplied with your compressor, and thread locker mount the compressor on the bracket, as indicated in the following picture.



Advisory: Do not bump, or pull the master cylinder away from the booster during this install. Doing so will dislodge the booster O-Ring. If the O-Ring becomes dislodged, do not drive the Jeep and contact tech support for additional information.

- Using firm pressure and pushing as indicated in the following picture, bend the A/C hose toward the distributor cap in order to provide clearance for the bracket.

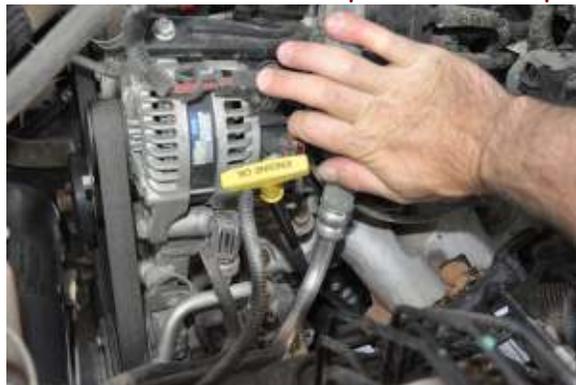

- Loosely zip tie the vacuum hose as indicated in the previous picture, in order to assure at least $\frac{1}{2}$ " clearance around the compressor head.
- Remove Driver's and Passenger's Side Master Cylinder Nuts as indicated in pictures:



- Remove the brake fluid sensor wire connector - With a small flat head screw driver, slide the red tab toward the passenger's side. Press the tabs and pull the connector off of the brake fluid reservoir.
- Disconnect the small plastic wire clip indicated in the previous picture.
- Thread the connector and wire bundle under the steel brake line and re-attach as indicated in the previous picture.
- 13mm wrench - Remove both driver's and passenger's side master cylinder nuts.
- 13mm wrench - Using the previously removed factory nuts, install the bracket with the compressor installed.
- 10mm wrench and Philips head screw driver - Using the one remaining fastener that was included with your compressor, install the driver's side rear compressor fastener.

**Visit DominionOffroad.com for Jeep JK specialty products.
Write-ups and posts, on the forums are greatly appreciated.
Spread the word and thank you!**

