

DOMINION OFFROAD

Jeep JK

DIRT BAGZ SADDLE BAGZ

Phone: 626-Trails1 or 626-872-4571

INSTALLATION INSTRUCTIONS

4-Door Install: Use factory fasteners to install the bags.

2-Door Install:


For use with a 2-Door with a hard top, drill 1/4" holes through hard top and sheet metal, in the locations indicated in the picture. Then use the hex head cap screws, nuts and washers.

For use with a 2-door with soft top, use the self tapping screws and washers, as indicated in the picture.





Drill a 1/4" hole 12 3/4" back from this slot

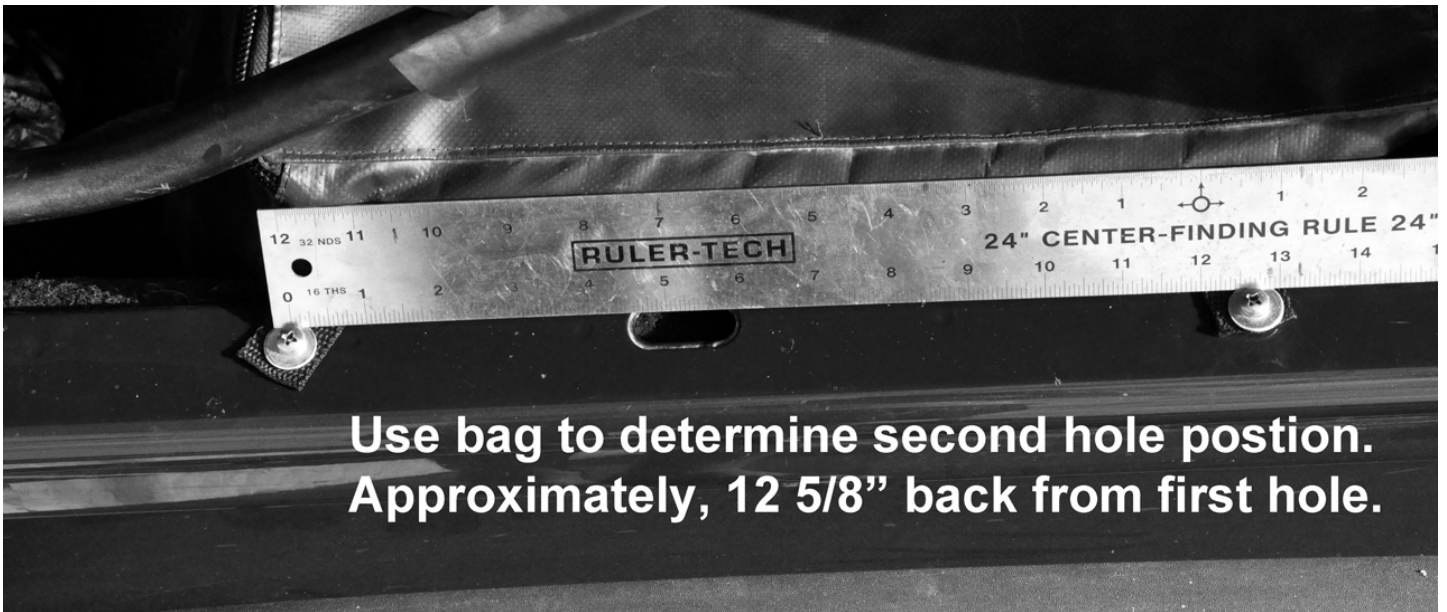

**Use bag to determine second hole position.
Approximately, 12 5/8" back from first hole.**