



# DOMINION OFFROAD

Technora Winch Rope Installation Instructions - Questions 626-874-4571

1. Cut two pieces of electrical tape to approx. 15" length.
2. Install the tape on the winch rope:

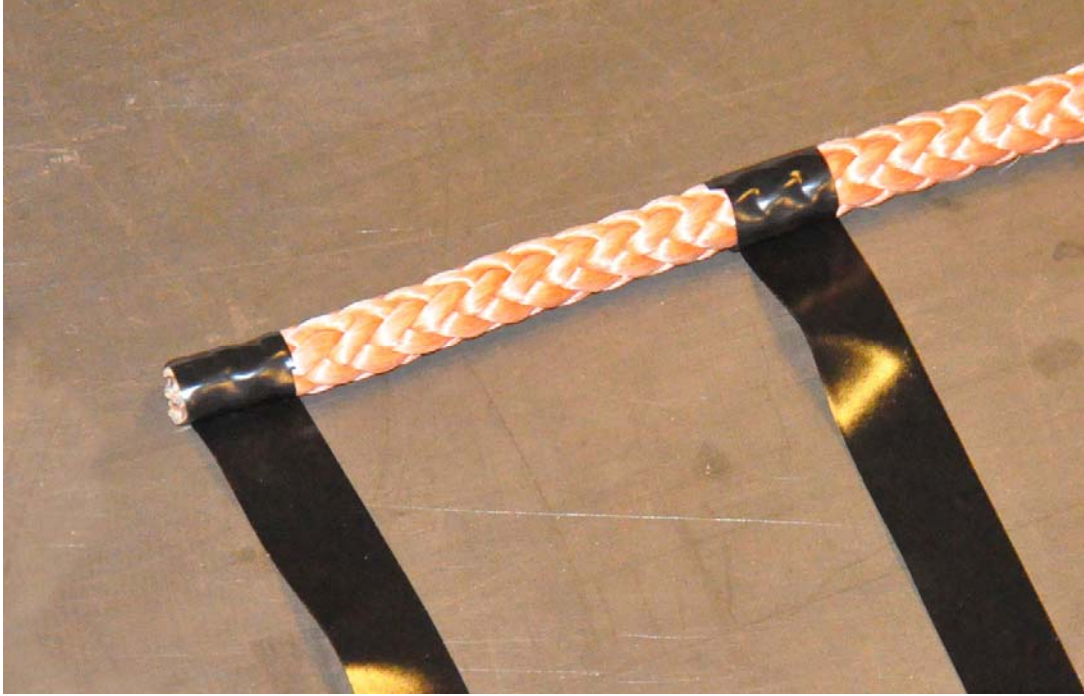

3. Begin installation of the tape and rope:

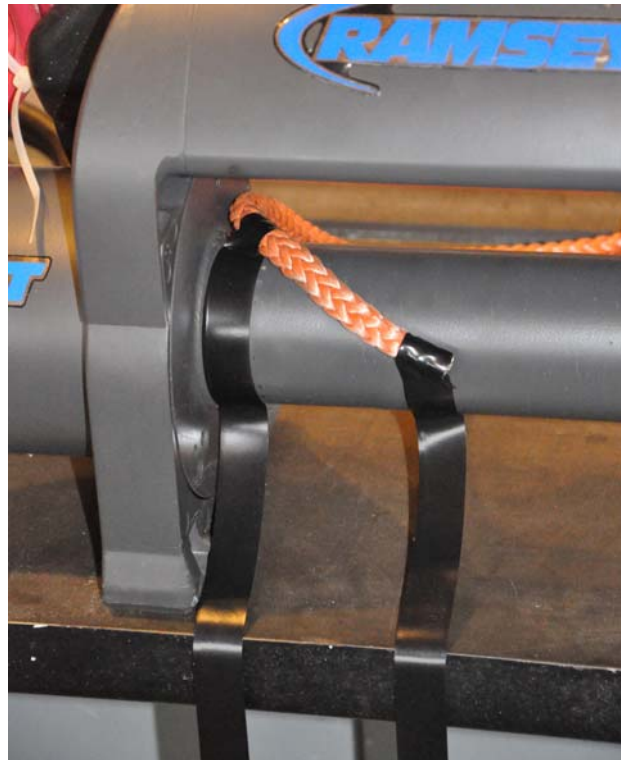

# DOMINION OFFROAD

4. Finish tape installation. The easiest way is to turn the drum in the reverse direction, while holding the tape with your second and third hands.
5. With pressure on the rope, spool the drum.



Always retain a minimum of at least 7 wraps around the drum. The wraps hold the rope to the drum, not the tape.

Factory Store: [www.JeepSWAG.com](http://www.JeepSWAG.com)

-

Blog: [www.JeepSWAG.com/blog](http://www.JeepSWAG.com/blog)

